


Guide to Establishing the Design Head Attenuation Storage System Using Oversized Pipes

Top Water Level = Upstream invert + Storage Pipe Diameter

Design Head = Top Water Level - Outlet invert Level

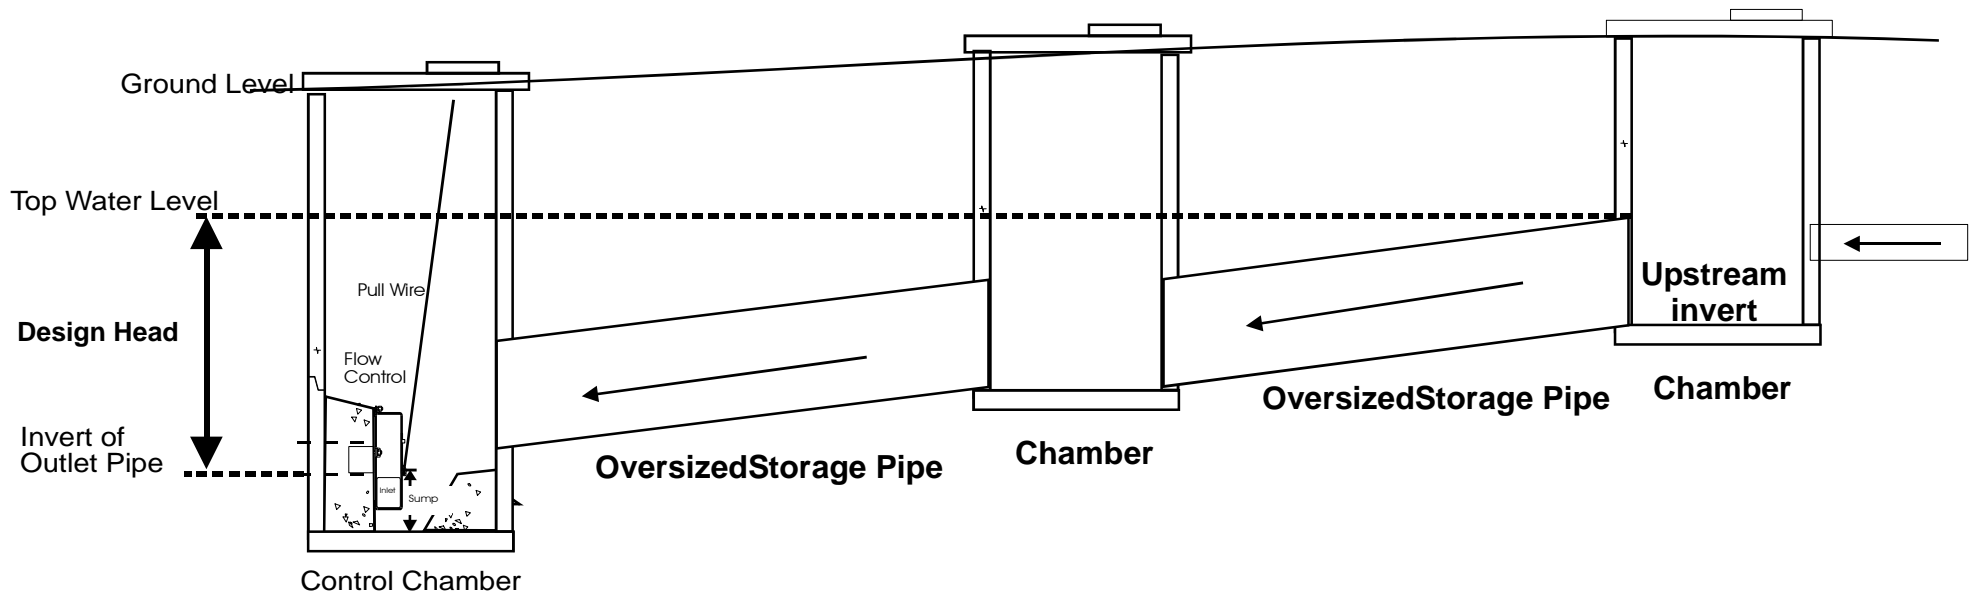

Crown Water Systems
Gibbs House, Kennel Ride, Ascot SL5 7NT
tel 01344 886996 fax 01344 886646
e.mail sales@crownwater.com