

Crown Water Orifice Plate **Operation and Maintenance Instructions**

Operation

The Orifice Plate Flow Control unit is a surface water regulator.

It is entirely self-activating and requires no manual intervention.

Maintenance

The unit requires no routine maintenance.

In the event of the blockage, the blockage/foreign material should be manually removed

Inspection

The chamber containing the unit should be inspected in line with normal practice.

Any debris or silt should be removed.

Any visible fixing bolts should be checked.

If the unit has been removed, it must be replaced to its original location and securely fitted before the unit becomes operational.